


Pin Insertion Tools

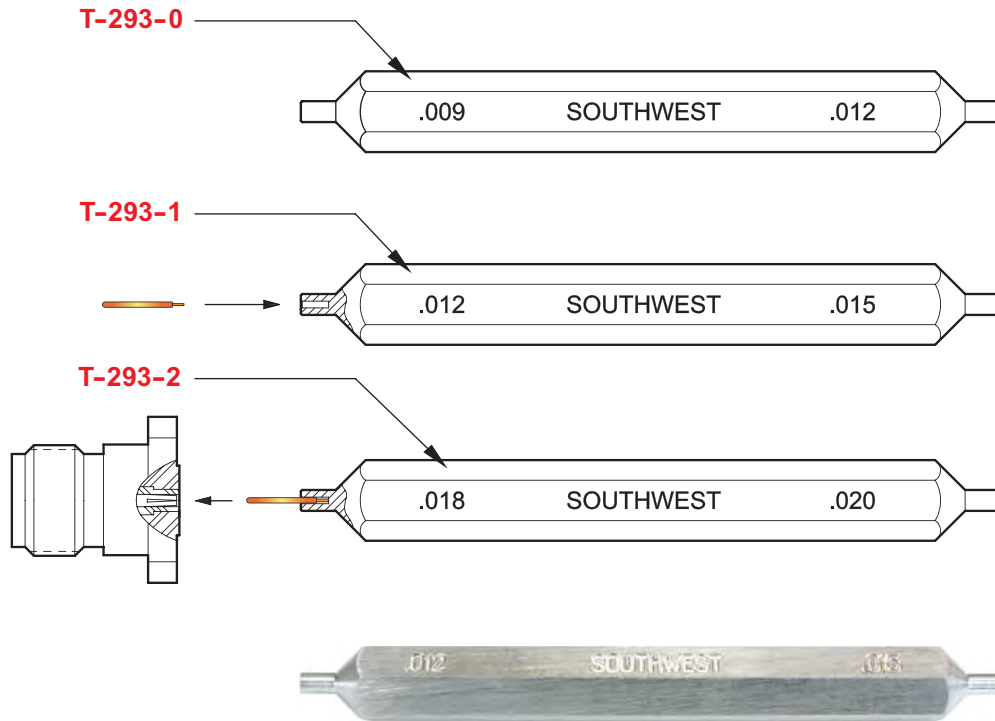

1. Select proper tool from the table below.
2. Insert pin into tool as illustrated (tab or small dia. first).
3. Align pin with socket contact in connector as illustrated.
4. Insert pin into contact with gentle firm pressure.
5. Remove tool. Use tweezers for next operation.
6. Set pin to desired depth and rotate to align tab if necessary.

To Accept Pin Dia.	Tool No.
.009	T-293-0
.012	T-293-0, -1
.015	T-293-1
.018	T-293-2
.020	T-293-2

Not available for .036